


Instructions:


1. Place ceiling tile into acoustical drop ceiling. Ensure the area above the drop ceiling is large enough to absorb the warm discharge air, and complies with all local building codes.
2. Attach 8-Inch duct to CoolCube's condenser flange (sold separately). To maximize cooling capacity, minimize sharp bends and kinks wherever possible.
3. If necessary route wire through the side holes in the ceiling tile to install the tile more securely.
4. If you have any questions, please contact your CoolCube reseller or contact MaxPower at 800-576-3966 or sales@coolcube10.com

Inventory:

(1) Ceiling Tile

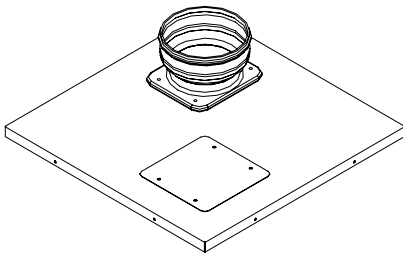


(1) 8-Inch Duct – 10 Ft. Long

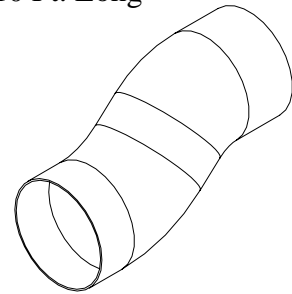

Ensure large ceiling plenum space to absorb warm discharge air

If necessary route wire through the side holes in the ceiling tile to install the tile more securely

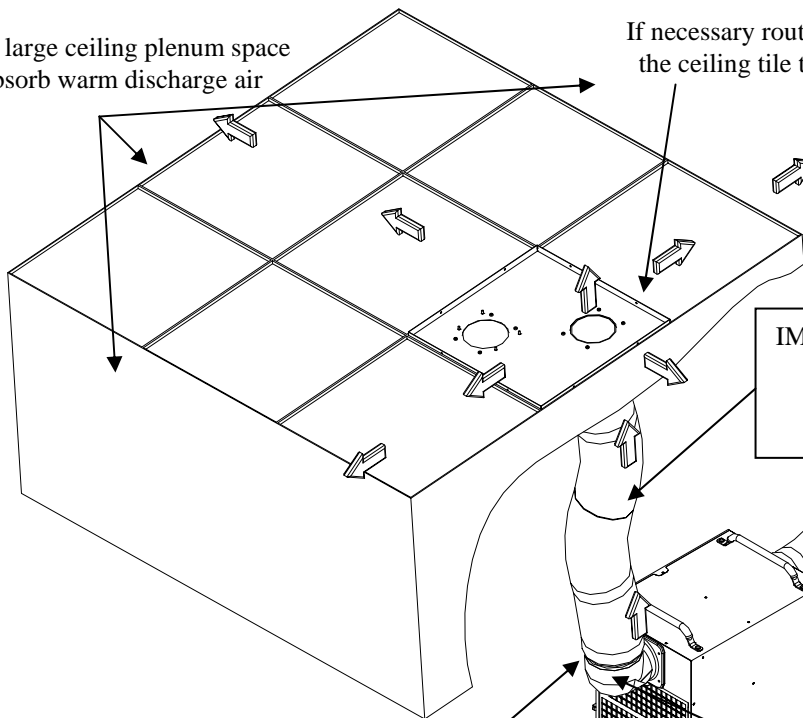

IMPORTANT:

Minimize sharp bends and kinks in discharge duct to maximize cooling capacity.

Attach duct to flange with clamp

90° Flange (not included)