


Instructions:

1. Place ceiling tile into acoustical drop ceiling. Ensure the area above the drop ceiling is large enough to absorb the warm discharge air, and complies with all local building codes.
2. If necessary route wire through the side holes in the ceiling tile to install the tile more securely.
3. TO MAXIMIZE COOLING CAPACITY, MINIMIZE SHARP BENDS AND KINKS WHEREVER POSSIBLE.
4. If you have any questions, please contact your CoolCube reseller or MaxPower at 800-576-3966 or sales@coolcube10.com

Single CoolCube 10 with Condenser Plenum (see figure below)

1. Attach the 8-Inch duct below the sheet metal deflector to the CoolCube's condenser flange (sold separately).
2. Attach the other 8-Inch duct to the condenser plenum (sold separately).

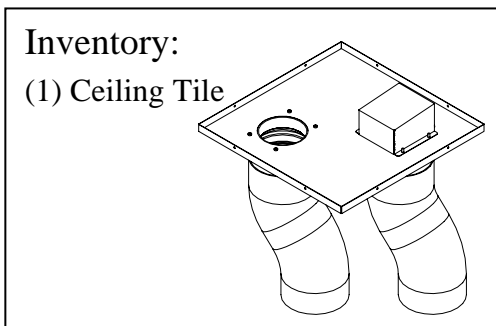

Stacked CoolCube units (see figure below)

- Remove the sheet metal deflector. Attach the 8-Inch duct to the top CoolCube's condenser flange (sold separately). It may be necessary to cut a portion of the duct to fit properly without kinks or bends.
- Attach the other 8-Inch duct to the bottom CoolCube's condenser flange (sold separately).

